

**Car**  
**General fault isolation procedure**

**Fault Codes**

Fault code	Fault description

**Table of contents**

Page

General fault isolation procedure.....	1
References.....	1
Preliminary requirements.....	1
Fault isolation procedure.....	2
Requirements after job completion.....	3

**List of tables**

1	References.....	1
2	Required conditions.....	2
3	Support equipment.....	2
4	Consumables, materials and expendables.....	2
5	Spares.....	2

**References**

*Table 1 References*

Data module/Technical publication	Title
None	

**Preliminary requirements**

This is a draft copy of issue 000-01.

Produced by: khzae.net

## Required conditions

Table 2 Required conditions

Action/Condition	Data module/Technical publication
Car will not start	

## Support equipment

Table 3 Support equipment

Name	Identification/Reference	Quantity	Remark
None			

## Consumables, materials and expendables

Table 4 Consumables, materials and expendables

Name	Identification/Reference	Quantity	Remark
None			

## Spares

Table 5 Spares

Name	Identification/Reference	Quantity	Remark
None			

## Safety conditions

None

### ***Fault isolation procedure***

- 1 Do warning lights appear?
- 1.1 Yes: Go to [Step 2](#).
- 1.2 No: Go to [Step 3](#).

- 2 Battery is flat, call mechanic  
**Go to Requirements after job completion.**
- 3 Lock & unlock car to disable immobiliser and try starting again
- 4 Does the engine still not start?
  - 4.1 Yes: Go to [Step 5](#).
  - 4.2 No: Go to [Step 6](#).
- 5 Engine is flooded/other technical issue, call mechanic  
**Go to Requirements after job completion.**
- 6 Car is working  
**Go to Requirements after job completion.**

***Requirements after job completion***

None.

This is a draft copy of issue 000-01.

Produced by: khzae.net